
## Series 19 Modulating Failsafe S20 Wiring Diagram

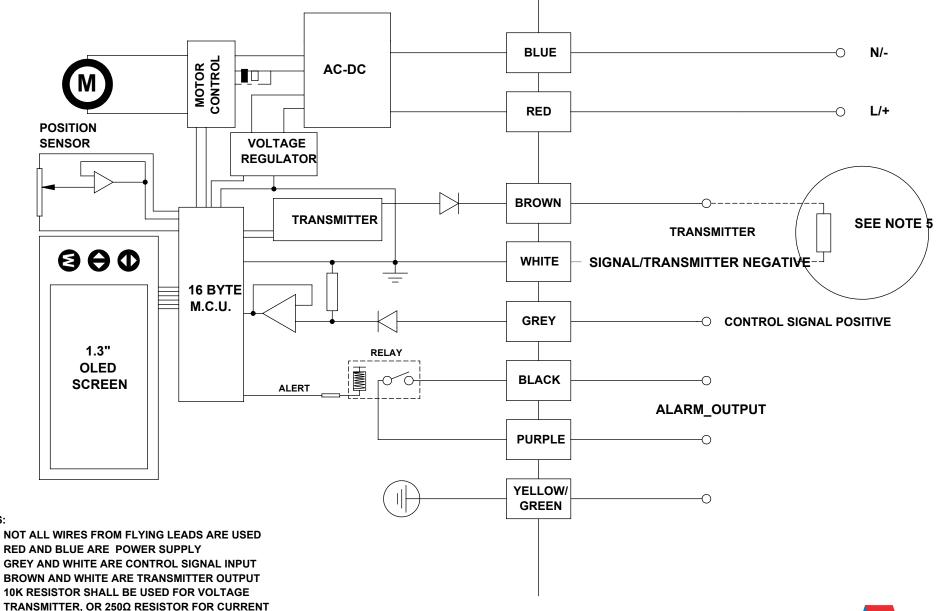

- TRANSMITTER

  6. USER CAN SETWO CONTROL" DEFAULT POSITION IN FIRMWARE SETTINGS (FAIL IN PLACE, OPEN, CLOSE) FOR 4-20mA, 1-5V, AND 2-10V CONTROL SIGNAL.

  STANDARD IS FAIL IN PLACE. THIS SETTING IS NOT POSSIBLE IF USING A CONTROL SIGNAL OF 0-20mA, 0-5V, OR 0-10V
- 7. ACTUATOR WILL CLOSE UPON LOSS OF SUPPLY POWER
- 8. HEATER IS INTERNALLY WIRED & OPERATIONAL AS LONG AS ACTUATOR IS POWERED

NOTES:

